




hp envy m6-k025dx HHD Replacement

how to replace the HHD if missing or broken.

Written By: manuel

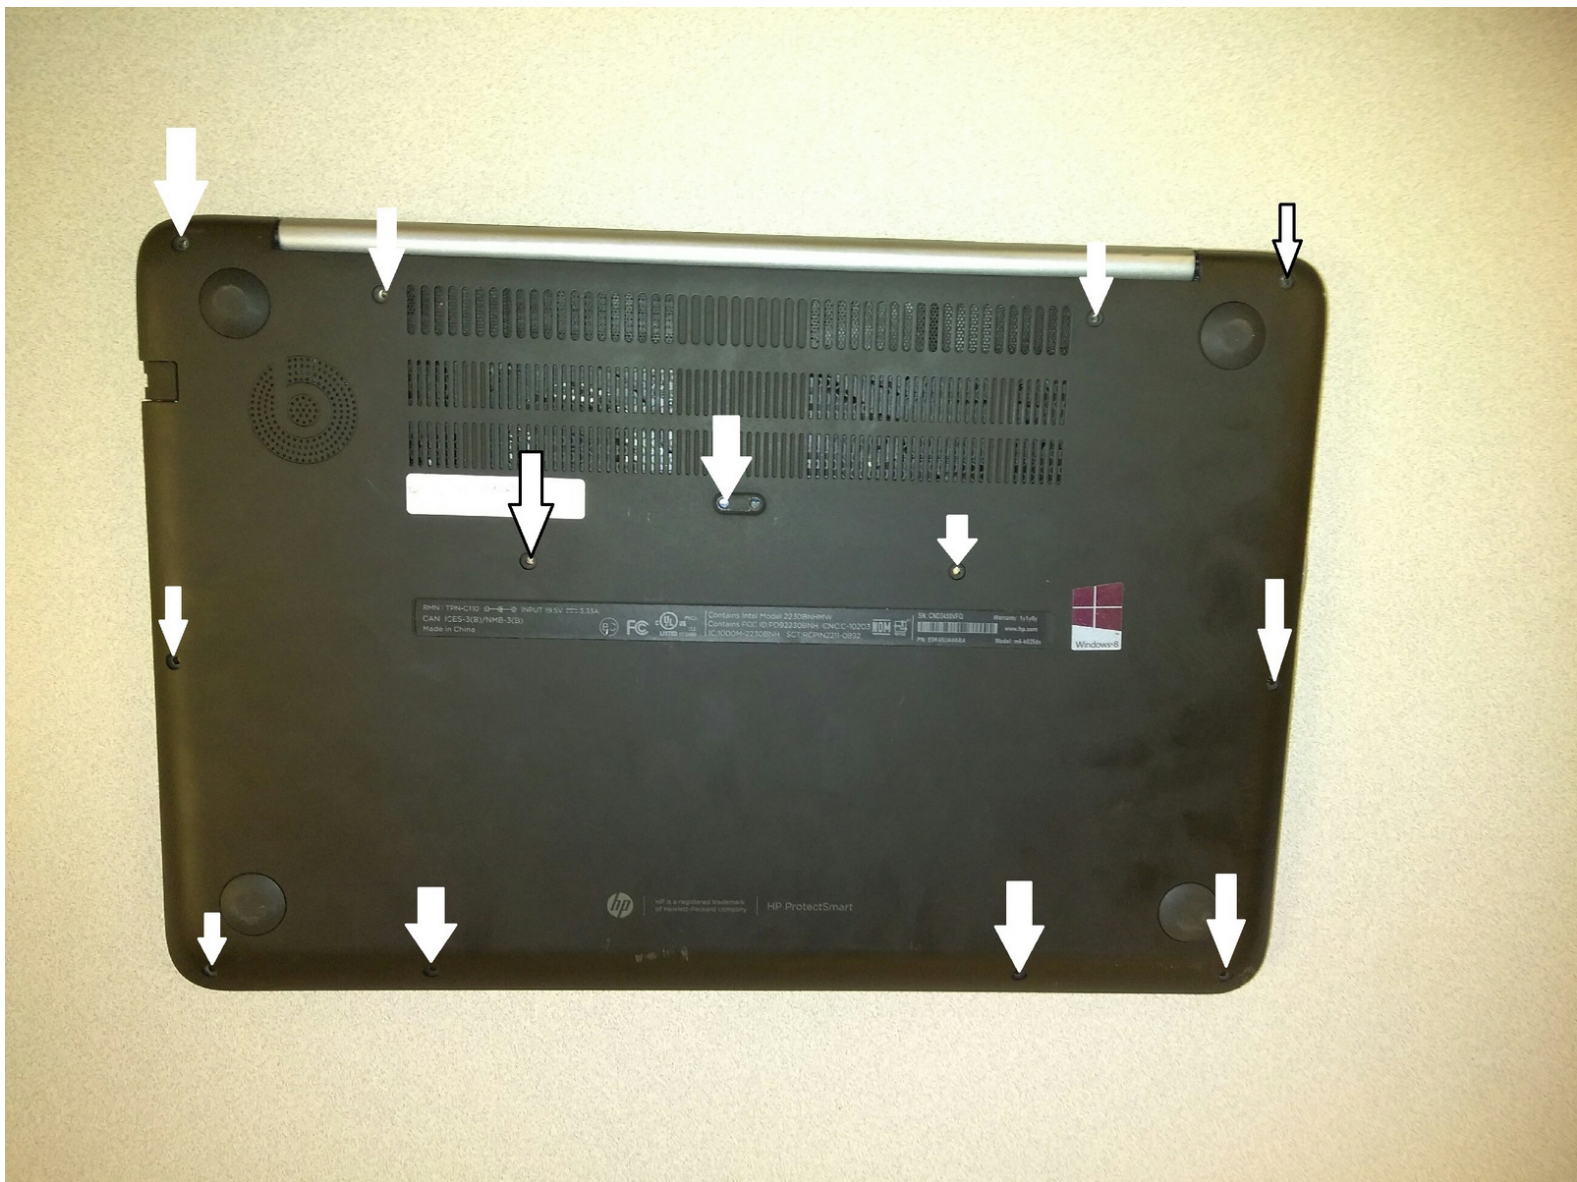



TOOLS:


- [1 x PH0 screw bit](#) (1)
- [iFixit Opening Tools](#) (1)
- [Philips Head Screwdriver: Sized PH000](#) (1)



PARTS:


- [HDD/SSD](#) (1)

Step 1 — back panel

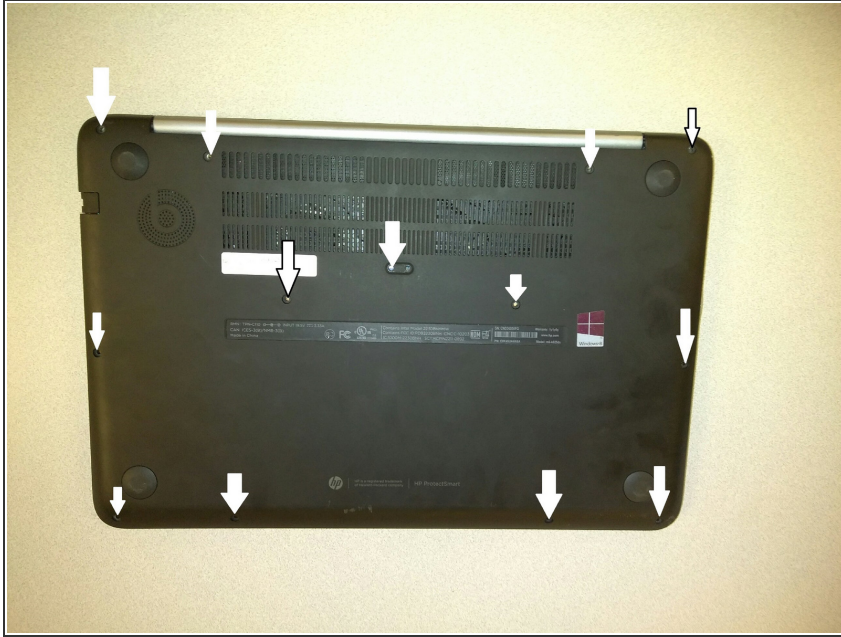


- remove the 12 screws on the back panel

Step 2 — remove back panel

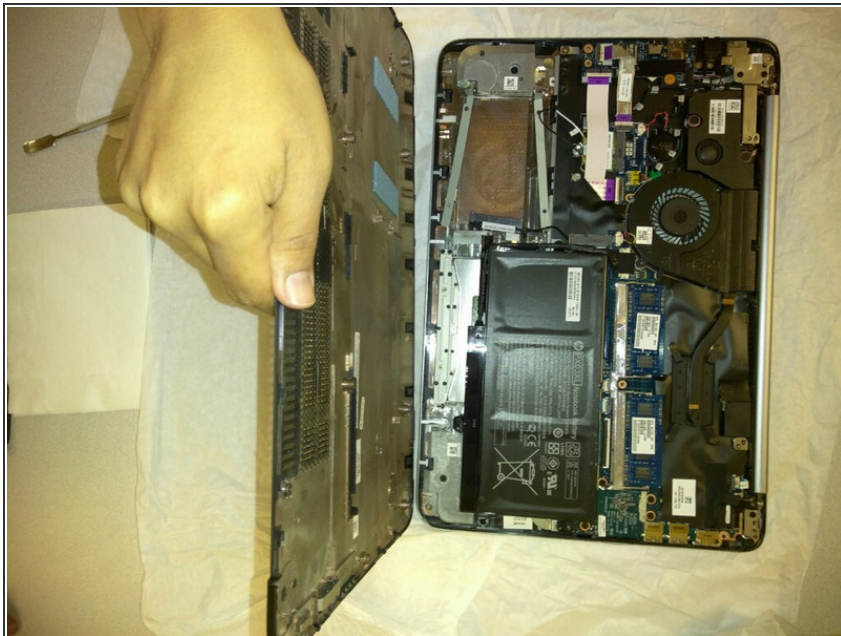


- using the pry tool lift the corners to unclip the back panel

Step 3 — removing HDD

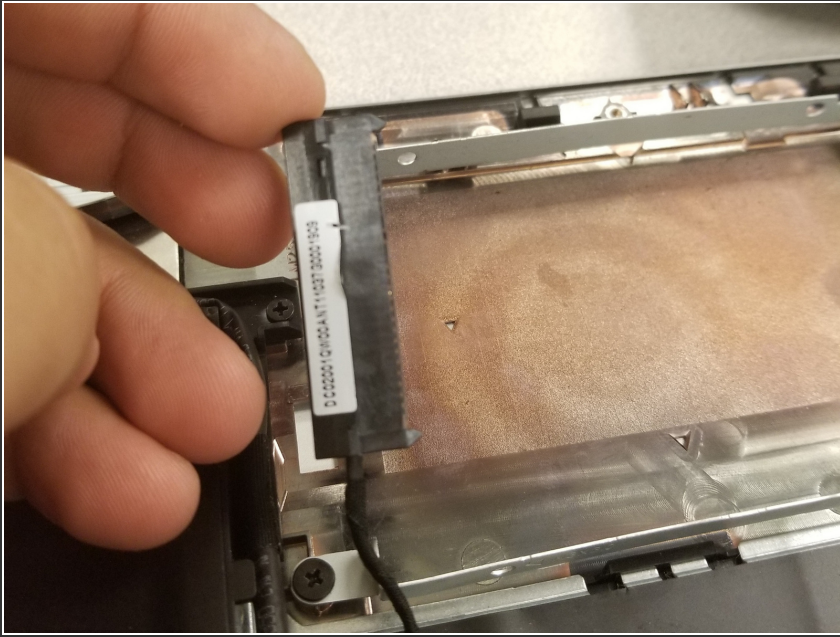

- remove the wire harness

Step 4 — removing HDD

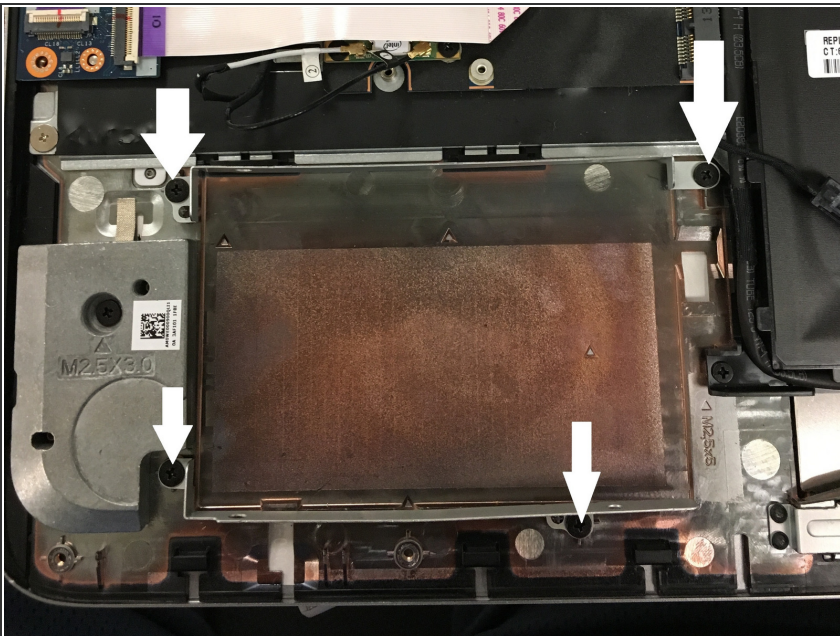

- unscrew the four screws that hold the HDD in place and replace it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-09 10:19:25 AM.